




Application Guide

CAR BOTTOM, ANNEALING & HOMOGENIZING FURNACE BASES

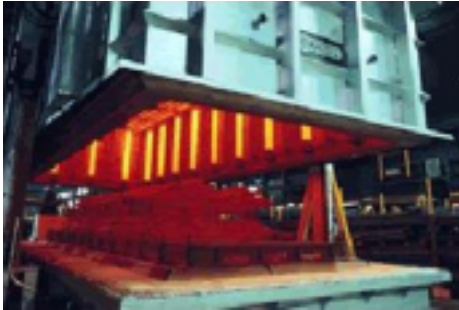

Car Bottom

	Perimeter (cast or pre-cast)	Car Top	Insulation
<i>Normal Service</i>	Plicast HyMOR 3000	Plicast 27 C	Plicast LWI 24
<i>Severe Service</i>	Plicast HyMOR TSR Plus KK Plicast HyMOR 3100 Special	Plicast HyMOR 3000	

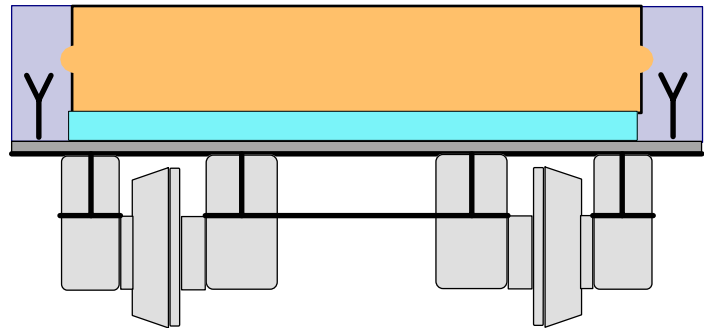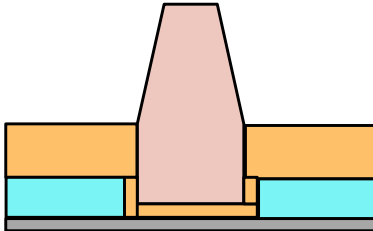

	Piers (cast or pre-cast)
<i>Normal Service</i>	Plicast HyMOR 3000
<i>Severe Service</i>	Plicast HyMOR TSR Plus KK Plicast HyMOR 3100 Special

Homogenizing Furnace

	Base	Insulation
<i>Normal Service</i>	Plicast 27 C	Plicast LWI 20 Plicast LWI 24
<i>Severe Service</i>	Plicast HyMOR 3000	

F.S. Sperry Co., Inc.
1907 Vanderhorn Drive
Memphis, TN. 38134

Tel: 901-373-9000
Fax: 901-385-3272

www.fssperry.com

Annealing Furnace

	Base	Perimeter
<i>Normal Service</i>	Plicast 27 C	Plicast LWI 28
<i>Severe Service</i>	Plicast HyMOR 3000 Plicast HyMOR TSR Plus KK	

This application guide is intended for general information only. Please consult Plibrico Company or your local Plibrico Representative for specific application assistance and product recommendations.

